



# Code List North America

TV Code List	TV Code List	TV Code List	TV Code List	TV Code List	TV Code List	SAT Code List	SAT Code List	Cable Code List	Cable Code List
<b>ACER</b> 3221 <b>ADVENT</b> 0631,2321,3211 <b>AIKO</b> 1011 <b>AKAI</b> 2141,2741,4581,0041 <b>AOC</b> 0001,0011,0251,0391,0611,0891,2701,2901,4111,4421 <b>APEX</b> 0431,2471,2691,2911,4441 <b>AUDIOVOX</b> 2191 <b>AURORA</b> 3051 <b>AUVIO</b> 3601,3611, <b>AVOL</b> 4461 <b>BANG &amp; OLUFSEN</b> 1591 <b>BELCOR</b> 0001,2901, <b>BELL &amp; HOWELL</b> 1661,2851,2871 <b>BENQ</b> 1761,2221, <b>BOE</b> 4091,4111, <b>BROKSONIC</b> 0211,0371,0851,1631 <b>BROKWOOD</b> 0001,2901, <b>CHANG HONG</b> 3951,4011,4021,4151,4161 <b>CHANGHONG</b> 2691,3531, <b>CHIMEI</b> 3061 <b>COBY</b> 2511,2521,2531,2541,2551,3271 <b>CONTEC</b> 0011,1911,2191 <b>CRAIG</b> 2191 <b>CROSLEY</b> 2321 <b>CROWN</b> 2191 <b>CTX</b> 1441 <b>CURTIS MATHES</b> 0001,1561,1661,2141,2691,2901,3401,1191,2851,2871,0261,3411,1311,3421 <b>DAEWOO</b> 0001,0221,0251,0591,0721,0831,0971,1011,1081,1231,1251,1501,1561,1841,2181,2191,2701,2901 <b>DAYTRON</b> 0001,2901, <b>DELL</b> 0981,2321,2901 <b>DIGISTAR</b> 0381,0871,2321,2701 <b>DISTAR</b> 3181 <b>DUKANE</b> 0401,2051, <b>DUMONT</b> 0001,0991,2901 <b>DURABRAND</b> 0371,0861,1381,2291,2471,3921 <b>DYNASTY</b> 2191 <b>DYNEX</b> 0371,2891,3101,3121,3841 <b>ELECTROBAND</b> 0011,2741, <b>ELECTROHOME</b> 0001,1921,2151,2901, <b>ELEKTRA</b> 1661 <b>ELEMENT</b> 2401,3431,3441,3451,3791,3821, <b>EMERSON</b> 0001,0021,0031,4571,0451,0691,0701,731,851,931,1251,1341,1381,1451,1561,1631,1681,1701,1801,1931,2171,2191,2901,3461,3801,4511,1461,0291,0371,0441,0001,1711,2871,4571,0071,2901,3871 <b>ERISSON</b> 4001 <b>EVOLUTION</b> 3591 <b>FISHER</b> 1581,1911,2871 <b>FUJITSU</b> 0901,1711,0701,0931,1381, <b>AKAI</b> 1011 <b>ADVENT</b> 0631,2321,3211 <b>AIKO</b> 1011 <b>AKAI</b> 2141,2741, <b>AOC</b> 0001,0011,0251,0391,0611,0891,2701,2901,4111,4421 <b>APEX</b> 0431,2471,2691,2911,4441 <b>AUDIOVOX</b> 2191 <b>AURORA</b> 3051 <b>AUVIO</b> 3601,3611, <b>AVOL</b> 4461 <b>BANG &amp; OLUFSEN</b> 1591 <b>BELCOR</b> 0001,2901, <b>BELL &amp; HOWELL</b> 1661,2851,2871 <b>BENQ</b> 1761,2221, <b>BOE</b> 4091,4111, <b>BROKSONIC</b> 0211,0371,0851,1631 <b>BROKWOOD</b> 0001,2901, <b>CHANG HONG</b> 3951,4011,4021,4151,4161 <b>CHANGHONG</b> 2691,3531, <b>CHIMEI</b> 3061 <b>COBY</b> 2511,2521,2531,2541,2551,3271 <b>CONTEC</b> 0011,1911,2191 <b>CRAIG</b> 2191 <b>CROSLEY</b> 2321 <b>CROWN</b> 2191 <b>CTX</b> 1441 <b>CURTIS MATHES</b> 0001,1311,1561,1661,2141,2691,2901,3401,1191,2851,2691,0261,3411,2851,3421 <b>DAEWOO</b> 0001,0221,0251,0721,0831,0971,1011,1231,1251,1501,1561,1841,2181,2191,2701,2901 <b>DAYTRON</b> 0001,2901, <b>DELL</b> 0981,2321,2901 <b>DIGISTAR</b> 0381,0871,2321,2701 <b>DISTAR</b> 3181 <b>DUKANE</b> 0401,2051, <b>DUMONT</b> 0001,0991,2901 <b>DURABRAND</b> 0371,0861,1381,2291,2471,3921 <b>DYNASTY</b> 2191 <b>DYNEX</b> 0371,2891,3101,3121,3841 <b>ELECTROBAND</b> 0011,2741, <b>ELECTROHOME</b> 0001,1921,2151,2901 <b>ELEKTRA</b> 1661	<b>ELEMENT</b> 2401,3431,3441,3451,3791,3821, <b>EMERSON</b> 0001,0021,0031,4571,0451,0691,0701,731,851,931,1251,1341,1381,1451,1561,1631,1681,1701,1801,1931,2171,2191,2901,3461,3801,4511,1461,0291,0371,0441,0001,1711,2871,4571,0071,2901,3871 <b>ERISSON</b> 4001 <b>EVOLUTION</b> 3591 <b>FISHER</b> 1581,1911,2871 <b>FUJITSU</b> 0901,1711,0701,0931,1381, <b>AKAI</b> 1011 <b>ADVENT</b> 0631,2321,3211 <b>AIKO</b> 1011 <b>AKAI</b> 2141,2741, <b>AOC</b> 0001,0011,0251,0391,0611,0891,2701,2901,4111,4421 <b>APEX</b> 0431,2471,2691,2911,4441 <b>AUDIOVOX</b> 2191 <b>AURORA</b> 3051 <b>AUVIO</b> 3601,3611, <b>AVOL</b> 4461 <b>BANG &amp; OLUFSEN</b> 1591 <b>BELCOR</b> 0001,2901, <b>BELL &amp; HOWELL</b> 1661,2851,2871 <b>BENQ</b> 1761,2221, <b>BOE</b> 4091,4111, <b>BROKSONIC</b> 0211,0371,0851,1631 <b>BROKWOOD</b> 0001,2901, <b>CHANG HONG</b> 3951,4011,4021,4151,4161 <b>CHANGHONG</b> 2691,3531, <b>CHIMEI</b> 3061 <b>COBY</b> 2511,2521,2531,2541,2551,3271 <b>CONTEC</b> 0011,1911,2191 <b>CRAIG</b> 2191 <b>CROSLEY</b> 2321 <b>CROWN</b> 2191 <b>CTX</b> 1441 <b>CURTIS MATHES</b> 0001,1311,1561,1661,2141,2691,2901,3401,1191,2851,2691,0261,3411,2851,3421 <b>DAEWOO</b> 0001,0221,0251,0721,0831,0971,1011,1231,1251,1501,1561,1841,2181,2191,2701,2901	<b>DAEWOO</b> 1081,1841,0591,2181,2191,2701,2901 <b>DAYTRON</b> 0001,2901, <b>DELL</b> 0981,2321,2901 <b>DIGISTAR</b> 0381,0871,2321,2701 <b>DISTAR</b> 3181 <b>DUKANE</b> 0401,2051, <b>DUMONT</b> 0001,0991,2901 <b>DURABRAND</b> 0371,0861,1381,2291,2471,3921 <b>DYNASTY</b> 2191 <b>DYNEX</b> 0371,2891,3101,3121,3841 <b>ELECTROBAND</b> 0011,2741, <b>ELECTROHOME</b> 0001,1921,2151,2901, <b>ELEKTRA</b> 1661 <b>ELEMENT</b> 2401,3431,3441,3451,3791,3821, <b>EMERSON</b> 0001,0021,0031,4571,0451,0691,0701,731,851,931,1251,1341,1381,1451,1561,1631,1681,1701,1801,1931,2171,2191,2901,3461,3801,4511, <b>ERISSON</b> 4001 <b>EVOLUTION</b> 3591 <b>FISHER</b> 1581,1911,2871 <b>FUJITSU</b> 0901,1711,0701,0931,1381, <b>AKAI</b> 1011 <b>ADVENT</b> 0631,2321,3211 <b>AIKO</b> 1011 <b>AKAI</b> 2141,2741, <b>AOC</b> 0001,0011,0251,0391,0611,0891,2701,2901,4111,4421 <b>APEX</b> 0431,2471,2691,2911,4441 <b>AUDIOVOX</b> 2191 <b>AURORA</b> 3051 <b>AUVIO</b> 3601,3611, <b>AVOL</b> 4461 <b>BANG &amp; OLUFSEN</b> 1591 <b>BELCOR</b> 0001,2901, <b>BELL &amp; HOWELL</b> 1661,2851,2871 <b>BENQ</b> 1761,2221, <b>BOE</b> 4091,4111, <b>BROKSONIC</b> 0211,0371,0851,1631 <b>BROKWOOD</b> 0001,2901, <b>CHANG HONG</b> 3951,4011,4021,4151,4161 <b>CHANGHONG</b> 2691,3531, <b>CHIMEI</b> 3061 <b>COBY</b> 2511,2521,2531,2541,2551,3271 <b>CONTEC</b> 0011,1911,2191 <b>CRAIG</b> 2191 <b>CROSLEY</b> 2321 <b>CROWN</b> 2191 <b>CTX</b> 1441 <b>CURTIS MATHES</b> 0001,1311,1561,1661,2141,2691,2901,3401,1191,2851,2691,0261,3411,2851,3421 <b>DAEWOO</b> 0001,0221,0251,0721,0831,0971,1011,1231,1251,1501,1561,1841,2181,2191,2701,2901	<b>DAEWOO</b> 1081,1841,0591,2181,2191,2701,2901 <b>DAYTRON</b> 0001,2901, <b>DELL</b> 0981,2321,2901 <b>DIGISTAR</b> 0381,0871,2321,2701 <b>DISTAR</b> 3181 <b>DUKANE</b> 0401,2051, <b>DUMONT</b> 0001,0991,2901 <b>DURABRAND</b> 0371,0861,1381,2291,2471,3921 <b>DYNASTY</b> 2191 <b>DYNEX</b> 0371,2891,3101,3121,3841 <b>ELECTROBAND</b> 0011,2741, <b>ELECTROHOME</b> 0001,1921,2151,2901, <b>ELEKTRA</b> 1661 <b>ELEMENT</b> 2401,3431,3441,3451,3791,3821, <b>EMERSON</b> 0001,0021,0031,4571,0451,0691,0701,731,851,931,1251,1341,1381,1451,1561,1631,1681,1701,1801,1931,2171,2191,2901,3461,3801,4511, <b>ERISSON</b> 4001 <b>EVOLUTION</b> 3591 <b>FISHER</b> 1581,1911,2871 <b>FUJITSU</b> 0901,1711,0701,0931,1381, <b>AKAI</b> 1011 <b>ADVENT</b> 0631,2321,3211 <b>AIKO</b> 1011 <b>AKAI</b> 2141,2741, <b>AOC</b> 0001,0011,0251,0391,0611,0891,2701,2901,4111,4421 <b>APEX</b> 0431,2471,2691,2911,4441 <b>AUDIOVOX</b> 2191 <b>AURORA</b> 3051 <b>AUVIO</b> 3601,3611, <b>AVOL</b> 4461 <b>BANG &amp; OLUFSEN</b> 1591 <b>BELCOR</b> 0001,2901, <b>BELL &amp; HOWELL</b> 1661,2851,2871 <b>BENQ</b> 1761,2221, <b>BOE</b> 4091,4111, <b>BROKSONIC</b> 0211,0371,0851,1631 <b>BROKWOOD</b> 0001,2901, <b>CHANG HONG</b> 3951,4011,4021,4151,4161 <b>CHANGHONG</b> 2691,3531, <b>CHIMEI</b> 3061 <b>COBY</b> 2511,2521,2531,2541,2551,3271 <b>CONTEC</b> 0011,1911,2191 <b>CRAIG</b> 2191 <b>CROSLEY</b> 2321 <b>CROWN</b> 2191 <b>CTX</b> 1441 <b>CURTIS MATHES</b> 0001,1311,1561,1661,2141,2691,2901,3401,1191,2851,2691,0261,3411,2851,3421 <b>DAEWOO</b> 0001,0221,0251,0721,0831,0971,1011,1231,1251,1501,1561,1841,2181,2191,2701,2901	<b>HISENSE</b> 3551,3641,3711,3801,3911,4171 <b>HITACHI</b> 0001,0401,0841,2051,1341,1661,1721,1911,2901,3261,3621,0941,0931,1801,3631 <b>INFINITY</b> 2321 <b>INITIAL</b> 2481 <b>INSIGNIA</b> 0371,0701,0871,2241,2271,2321,2471,1381,1241,2891,2921 <b>INTEGRA</b> 1841 <b>iSymphony</b> 3031 <b>IBL</b> 2321 <b>JENSEN</b> 0001,2271,2901 <b>JVC</b> 0311,0481,0771,0901,0941,1801,1911,3751,3811 <b>KAWASHO</b> 0001,2741,2901 <b>KENWOOD</b> 0001,2901, <b>KKTV</b> 3761 <b>KLH</b> 2691 <b>KONKA</b> 0751,1241,1671,2241,2371,3561,3761,2191,2121,3971,4141 <b>LASONIC</b> 1211 <b>LEADER</b> 4061 <b>LEEGE</b> 4331 <b>LENOVO</b> 4121 <b>LG</b> 0001,0251,0611,0761,0991,1501,1911,2701,3021,3071,3171,3231,3001,2901,0931,4031,4381,4561 <b>LOEWE</b> 4411 <b>LOGIK</b> 1661,2851, <b>LUXMAN</b> 0001,2901, <b>LXI</b> 0001,0261,0931,1001,1311,2321,2691,2851,2871,2901 <b>MAGNAVOX</b> 0001,0321,1021,1801,2321,2731,0961,0701,2901,4481 <b>MAJESTIC</b> 1661,2851, <b>MANHATTAN</b> 3831 <b>MARANTZ</b> 0001,1841,2321,2901 <b>MATSUI</b> 3471 <b>MELODY</b> 3991 <b>MEMOREX</b> 0001,0371,1661,1711,2851,2871,1631,2901, <b>MINISUBISHI</b> 0001,0251,1581,1711,1801,1921,2701,2901,3881 <b>NAD</b> 0001,0401,1311,2691,2901 <b>NEC</b> 0001,0251,0341,1801,1841,2151,2701,2901, <b>HISENSE</b> 3551,3641,3711,3801,3911,4171 <b>HITACHI</b> 0001,0401,0841,2051,1341,1661,1721,1911,2901,3261,3621,0941,0931,1801,3631 <b>INFINITY</b> 2321 <b>INITIAL</b> 2481 <b>INSIGNIA</b> 0371,0701,0871,2241,2271,2321,2471,1381,1241,2891,2921 <b>INTEGRA</b> 1841 <b>iSymphony</b> 3031 <b>IBL</b> 2321 <b>JENSEN</b> 0001,2271,2901 <b>JVC</b> 0311,0481,0771,0901,0941,1801,1911,3751,3811 <b>KAWASHO</b> 0001,2741,2901 <b>KENWOOD</b> 0001,2901, <b>KKTV</b> 3761 <b>KLH</b> 2691 <b>KONKA</b> 0751,1241,1671,2241,2371,3561,3761,2191,2121,3971,4141 <b>LASONIC</b> 1211 <b>LEADER</b> 4061 <b>LEEGE</b> 4331 <b>LENOVO</b> 4121 <b>LG</b> 0001,0251,0611,0761,0991,1501,1911,2701,3021,3071,3171,3231,3001,2901,0931,4031,4381,4561 <b>LOEWE</b> 4411 <b>LOGIK</b> 1661,2851, <b>LUXMAN</b> 0001,2901, <b>LXI</b> 0001,0261,0931,1001,1311,2321,2691,2851,2871,2901 <b>MAGNAVOX</b> 0001,0321,1021,1801,2321,2731,0961,0701,2901,4481 <b>MAJESTIC</b> 1661,2851, <b>MANHATTAN</b> 3831 <b>MARANTZ</b> 0001,1841,2321,2901 <b>MATSUI</b> 3471 <b>MELODY</b> 3991 <b>MEMOREX</b> 0001,0371,1661,1711,2851,2871,1631,2901, <b>MINISUBISHI</b> 0001,0251,1581,1711,1801,1921,2701,2901,3881 <b>NAD</b> 0001,0401,1311,2691,2901 <b>NEC</b> 0001,0251,0341,1801,1841,2151,2701,2901, <b>HISENSE</b> 3551,3641,3711,3801,3911,4171 <b>HITACHI</b> 0001,0401,0841,2051,1341,1661,1721,1911,2901,3261,3621,0941,0931,1801,3631 <b>INFINITY</b> 2321 <b>INITIAL</b> 2481 <b>INSIGNIA</b> 0371,0701,0871,2241,2271,2321,2471,1381,1241,2891,2921 <b>INTEGRA</b> 1841 <b>iSymphony</b> 3031 <b>IBL</b> 2321 <b>JENSEN</b> 0001,2271,2901 <b>JVC</b> 0311,0481,0771,0901,0941,1801,1911,3751,3811 <b>KAWASHO</b> 0001,2741,2901 <b>KENWOOD</b> 0001,2901, <b>KKTV</b> 3761 <b>KLH</b> 2691 <b>KONKA</b> 0751,1241,1671,2241,2371,3561,3761,2191,2121,3971,4141 <b>LASONIC</b> 1211 <b>LEADER</b> 4061 <b>LEEGE</b> 4331 <b>LENOVO</b> 4121 <b>LG</b> 0001,0251,0611,0761,0991,1501,1911,2701,3021,3071,3171,3231,3001,2901,0931,4031,4381,4561 <b>LOEWE</b> 4411 <b>LOGIK</b> 1661,2851, <b>LUXMAN</b> 0001,2901, <b>LXI</b> 0001,0261,0931,1001,1311,2321,2691,2851,2871,2901 <b>MAGNAVOX</b> 0001,0321,1021,1801,2321,2731,0961,0701,2901,4481 <b>MAJESTIC</b> 1661,2851, <b>MANHATTAN</b> 3831 <b>MARANTZ</b> 0001,1841,2321,2901 <b>MATSUI</b> 3471 <b>MELODY</b> 3991 <b>MEMOREX</b> 0001,0371,1661,1711,2851,2871,1631,2901, <b>MINISUBISHI</b> 0001,0251,1581,1711,1801,1921,2701,2901,3881 <b>NAD</b> 0001,0401,1311,2691,2901 <b>NEC</b> 0001,0251,0341,1801,1841,2151,2701,2901, <b>HISENSE</b> 3551,3641,3711,3801,3911,4171 <b>HITACHI</b> 0001,0401,0841,2051,1341,1661,1721,1911,2901,3261,3621,0941,0931,1801,3631 <b>INFINITY</b> 2321 <b>INITIAL</b> 2481 <b>INSIGNIA</b> 0371,0701,0871,2241,2271,2321,2471,1381,1241,2891,2921 <b>INTEGRA</b> 1841 <b>iSymphony</b> 3031 <b>IBL</b> 2321 <b>JENSEN</b> 0001,2271,2901 <b>JVC</b> 0311,0481,0771,0901,0941,1801,1911,3751,3811 <b>KAWASHO</b> 0001,2741,2901 <b>KENWOOD</b> 0001,2901, <b>KKTV</b> 3761 <b>KLH</b> 2691 <b>KONKA</b> 0751,1241,1671,2241,2371,3561,3761,2191,2121,3971,4141 <b>LASONIC</b> 1211 <b>LEADER</b> 4061 <b>LEEGE</b> 4331 <b>LENOVO</b> 4121 <b>LG</b> 0001,0251,0611,0761,0991,1501,1911,2701,3021,3071,3171,3231,3001,2901,0931,4031,4381,4561 <b>LOEWE</b> 4411 <b>LOGIK</b> 1661,2851, <b>LUXMAN</b> 0001,2901, <b>LXI</b> 0001,0261,0931,1001,1311,2321,2691,2851,2871,2901 <b>MAGNAVOX</b> 0001,0321,1021,1801,2321,2731,0961,0701,2901,4481 <b>MAJESTIC</b> 1661,2851, <b>MANHATTAN</b> 3831 <b>MARANTZ</b> 0001,1841,2321,2901 <b>MATSUI</b> 3471 <b>MELODY</b> 3991 <b>MEMOREX</b> 0001,0371,1661,1711,2851,2871,1631,2901, <b>MINISUBISHI</b> 0001,0251,1581,1711,1801,1921,2701,2901,3881 <b>NAD</b> 0001,0401,1311,2691,2901 <b>NEC</b> 0001,0251,0341,1801,1841,2151,2701,2901, <b>HISENSE</b> 3551,3641,3711,3801,3911,4171 <b>HITACHI</b> 0001,0401,0841,2051,1341,1661,1721,1911,2901,3261,3621,0941,0931,1801,3631 <b>INFINITY</b> 2321 <b>INITIAL</b> 2481 <b>INSIGNIA</b> 0371,0701,0871,2241,2271,2321,2471,1381,1241,2891,2921 <b>INTEGRA</b> 1841 <b>iSymphony</b> 3031 <b>IBL</b> 2321 <b>JENSEN</b> 0001,2271,2901 <b>JVC</b> 0311,0481,0771,0901,0941,1801,1911,3751,3811 <b>KAWASHO</b> 0001,2741,2901 <b>KENWOOD</b> 0001,2901, <b>KKTV</b> 3761 <b>KLH</b> 2691 <b>KONKA</b> 0751,1241,1671,2241,2371,3561,3761,2191,2121,3971,4141 <b>LASONIC</b> 1211 <b>LEADER</b> 4061 <b>LEEGE</b> 4331 <b>LENOVO</b> 4121 <b>LG</b> 0001,0251,0611,0761,0991,1501,1911,2701,3021,3071,3171,3231,3001,2901,0931,4031,4381,4561 <b>LOEWE</b> 4411 <b>LOGIK</b> 1661,2851, <b>LUXMAN</b> 0001,2901, <b>LXI</b> 0001,0261,0931,1001,1311,2321,2691,2851,2871,2901 <b>MAGNAVOX</b> 0001,0321,1021,1801,2321,2731,0961,0701,2901,4481 <b>MAJESTIC</b> 1661,2851, <b>MANHATTAN</b> 3831 <b>MARANTZ</b> 0001,1841,2321,2901 <b>MATSUI</b> 3471 <b>MELODY</b> 3991 <b>MEMOREX</b> 0001,0371,1661,1711,2851,2871,1631,2901, <b>MINISUBISHI</b> 0001,0251,1581,1711,1801,1921,2701,2901,3881 <b>NAD</b> 0001,0401,1311,2691,2901 <b>NEC</b> 0001,0251,0341,1801,1841,2151,2701,2901, <b>HISENSE</b> 3551,3641,3711,3801,3911,417					