

FLIPPER®

Two Device Universal



Code List North America

TV Code List

ABEX	0401
ACER	3221
ADMIRAL	1441, 1661, 2731
ADVENT	0631, 2321, 3211
ADVENTURA	0151
AIKO	1011
AIWA	0651, 0931
AKAI	2141, 2741
ALLERON	1711
AMARK	1441
AMTRON	2191
ANAM NATIONAL	0271, 2151, 2191, 2331
AOC	0001, 0011, 0251, 0391, 0611, 0891, 2701, 2901
APEX	0431, 2471, 2691, 2911
ARCHER	1441
ASPECT	2051
AUDIOVOX	2191
AURORA	3051
AXION	2191
BANG & OLUFSEN	1591
BELCOR	0001, 2901
BELL & HOWELL	1661, 2851, 2871
BENQ	1761, 2221
BRADFORD	2191
BROKSONIC	0211, 0371, 0851, 1631
BROKWOOD	0001, 2901
CANDLE	0001, 0151, 0961, 2901
CAPEHART	0391
CELEBRITY	2741
CELERA	2691
CENTRIOS	1111
CENTURION	2901
CETOMER	2961
CETRONIC	2191
CHANGHONG	2691
CHIMEI	3061
CITIZEN	0001, 0371, 0961, 1011, 1311, 1381, 1661, 2141, 2191, 2691, 2901
CLAIRTONE	0011
CLASSIC	2191, 2691
CLP	0061
CLP CLASSIC	0001, 0041, 2321, 2901
COBY	2511, 2551, 2521, 2531, 2541, 3271
COLOR VOICE	1841
COLORTYME	0001, 1841, 2901
CONCERTO	0001, 2901
CONCIERGE	0991
CONTEC	0011, 1911, 2191
CORNEA	2901
CRAIG	2191
CROSLLEY	2321
CROWN	2191
CTX	1441
CURTIS MATHES	0001, 0261, 1191, 1311, 1561, 1661, 2141, 2691, 2851, 2871, 2901
CXC	2191

TV Code List

DAEWOO	1081, 1231, 1251, 1561, 1841, 2181, 2191, 1501, 2701, 2901
DAYTRON	0001, 2901
DELL	0981, 2321, 2901
DIAMOND VISION	1211, 2001
DIGISTAR	0381, 0871, 2321, 2701
DIMENSIA	2851
DISNEY	1101
DISTAR	3181
DUKANE	0401, 2051
DUMONT	0001, 0991, 2901
DURABRAND	0371, 0861, 1381, 2291, 2471
DYNASTY	2191
DYNEX	0371, 2891, 3101, 3121
ELECTROBAND	0011, 2741
ELECTROHOME	0001, 1921, 2151, 2901
ELEKTRA	1661
ELITE VIDEO	0901
EMERSON	0001, 0021, 0031, 0041, 0271, 0281, 0291, 0371, 0441, 0451, 0691, 0701, 0731, 0851, 0931, 1251, 1341, 1381, 1451, 1461, 1561, 1631, 1681, 1701, 1711, 1801, 1931, 2171, 2191, 2871, 2901
ENVISION	0001, 0071, 2901
FISHER	1581, 1911, 2871
FUJITSU	0901, 1711
FUNAI	0701, 0931, 1381, 1711, 2191
FUTURETEC	2191
GATEWAY	0501
GE	0001, 0041, 0051, 0141, 0361, 0791, 1001, 1921, 0261, 1951, 2151, 2851, 2901
GIBRALTER	0001, 0991, 2901
GOLDSTAR	0001, 0251, 0611, 0761, 0931, 0991, 1501, 1911, 2701, 2901
GRUNDY	1711, 2191
GUESTVISION	2321
HAIER	0861, 2221, 2471
HALLMARK	0001, 2901
HARVARD	2191
HISENSE	2211, 2321, 2471
HITACHI	0001, 0401, 0841, 0931, 0941, 1341, 1661, 1721, 1801, 1911, 2051, 2901, 3261
ILO	1141, 1971, 2481
IMA	2191
INFINITY	2321
INITIAL	2481
INSIGNIA	0371, 0701, 0871, 1241, 1381, 2241, 2271, 2321, 2471, 2891, 2921
INTEGRA	1841
INTEQ	0991
iSymphony	3031
JANEIL	0151
JBL	2321
ICB	2741

TV Code List

JENSEN	0001, 2271, 2901
IVC	0311, 0481, 0771, 0901, 0941, 1801, 1911
KAWASHO	0001, 2741, 2901
KAYPANI	0391
KEC	2191
KENWOOD	0001, 2901
KLH	2691
KLOSS NOVABEAM	0151, 1021
KONKA	0751, 1241, 1671, 2121, 2191, 2241, 2371
KTY	0011, 1491, 1681, 2191
KURAZAI	1661
KWORLD	2931
LASONIC	1211
LG	0001, 0251, 0611, 0761, 0931, 0991, 1501, 1911, 2701, 2901, 3001, 3021, 3071, 3171, 3231
LODGENET	1661, 2091, 2851
LUCE	2501
LUXMAN	0001, 2901
LXI	0001, 0261, 0931, 1001, 1311, 2321, 2691, 2851, 2871, 2901
MAGNASONIC	1711
MAGNAVOX	1151, 0001, 0321, 0701, 0961, 1021, 1801, 2321, 2731, 2901
MAJESTIC	1661, 2851
MARANTZ	0001, 1841, 2321, 2901
MEDION	1101, 1141, 2351
MEGATRON	0001, 2051, 2901
MEI	0011
MEMOREX	0001, 0371, 1631, 1661, 1711, 2851, 2871, 2901
MGA	0001, 0251, 1581, 1711, 1801, 1911, 1921, 2701, 2901
MIDLAND	0051, 0261, 0991, 1001, 2851
MINUTZ	1951
MITSUBISHI	0001, 0251, 1581, 1711, 1801, 1921, 2701, 2901
MONIVISION	0491
MONTGOMERY WARD	1661, 2851, 2871
MOTEVA	2871
MOTOROLA	1441, 2151
MTC	0001, 0011, 0251, 1311, 2141, 2691, 2701, 2901
MULTITECH	2191
MULTIVISION	0081
MYRON & DAVIS	2101
NAD	0001, 0401, 1311, 2691, 2901
NEC	0001, 0251, 0341, 1801, 1841, 2151, 2701, 2901
NET TV	0501
NEXXTTECH	0871, 1201
NIKEI	2191
NIKKO	0001, 1011, 2901
NORCENT	0511, 2181, 2471
NTC	1011
OLEVIA	2771, 2781

TV Code List

OLEVIA	2791, 2901, 2971
ONCOMMAND	2321
ONKING	2191
ONWA	2191
OPTIMUS	0401, 0951, 2711
OPTOMA	2441, 3081
OPTONICA	0341, 1441
ORION	0281, 0371, 0991
PANASONIC	0051, 0951, 1491, 2151, 2321, 2711, 2801, 3281, 3301
PHILCO	0001, 0251, 0321, 0961, 1021, 1801, 2151, 2321, 2701, 2901, 2941
PHILIPS	2321, 1151, 0541, 0701, 0791, 0961, 1021, 1381, 1601, 1801, 2151, 2901, 3091, 3111, 3131, 3291
PHILIPS-MAGNAVOX	2321, 2731
PILOT	0001, 2901
PIONEER	0001, 0401, 1341, 1511, 1841, 2901
PIVA	2411
POLAROID	2421, 2271, 2311, 2321
PROSCAN	0261, 1001, 2061, 2301, 2851
PROTON	0001, 0391, 0641, 1911, 2231, 2901
PROVIEW	2421
PULSAR	0001, 0991, 2901
PYLE	3251
QUASAR	0051, 0951, 1491, 2151, 2321, 2711
RADIO SHACK	0001, 0341, 0931, 1001, 1701, 1911, 2191, 2711, 2851, 2871, 2901
RCA	0001, 2777, 0051, 0091, 0251, 0261, 0361, 0551, 0891, 1001, 1131, 1331, 1341, 1561, 1921, 2061, 2151, 2251, 2301, 2581, 2701, 2851, 2901, 2951
REALISTIC	0001, 0341, 0931, 1001, 1701, 1911, 2191, 2711, 2851, 2871, 2901
RHAPSODY	0011
RUNCO	0991, 1771, 1841
SAMPO	0001, 0391, 0501, 1911, 2901
SAMSUNG	0001, 0101, 0251, 0261, 0331, 0531, 0571, 0711, 1191, 1311, 1501, 1911, 2071, 2141, 2691, 2701, 2721, 2901
SAMTRON	3241
SANSUI	2141
SANTECA	0371, 1631
SANTO	0171
SANYO	0001, 0801, 1051, 1581, 1911, 2871, 2881, 2901, 2981, 2991, 3041
SCOTCH	0001, 2901
SCOTT	0001, 0021, 0281, 1711, 2191, 2901
SEIKI	0131
SELECTRON	2321, 2471, 2501
SHARP	0001, 0341, 0461, 0691

TV Code List

SHARP	1441, 2031, 2261, 2731, 2901, 3141, 3151, 3161
SHOGUN	0001
SIGNATURE	1661, 2171, 2851
SIGNET	2811, 2821, 2861
SIMPSON	0961
SONIC	0011
SONY	1071, 1641, 1731, 2161, 2741
SOUNDESIGN	0001, 0961, 1711, 2191, 2901
SPECTRAVISION	0791
SQUAREVIEW	1381
SSS	0001, 2191, 2901
STAR SIGHT	0061
STARLITE	2191
SUPERSCAN	0701, 2021, 2731
SUPERSONIC	0241
SUPRA	0001, 1991, 2901
SUPREMACY	0151
SUPREME	2741
SVA	2471
SYLVANIA	0001, 0321, 0371, 0701, 0931, 0961, 1021, 1381, 1601, 1801, 2321, 2761, 2901
SYMPHONIC	0021, 0701, 0931, 1381, 2191
SYNTAX	2901
TANDY	1441
TATUNG	1141, 2151, 2221
TECHNICS	0051
TECHWOOD	0001, 0051, 2901
TEKNIKA	0001, 0151, 0251, 0961, 1011, 1311, 1661, 1711, 1911, 2141, 2191, 2691, 2701, 2711, 2851, 2901
TELECATION	0821
TELERENT	1661, 2851
TERA	0001, 0641, 2901
TEVION	1141
TMK	0001, 2901
TOSHIBA	0211, 0231, 0341, 0821, 1121, 1191, 1311, 1801, 1841, 1911, 2141, 2691, 2711, 2871
TRUTECH	2461
UNIVERSAL	0791, 1951
VICTOR	0941
VIDTECH	0001, 0251, 2701, 2901
VIEWSONIC	0401, 0501
VIKING	0151
VIORE	2831, 2841
VIZIO	2221, 2901
WARDS	0001, 0021, 0251, 0321, 0341, 0791, 0961, 1021, 1321, 1661, 1711, 1951, 2321, 2701, 2851, 2901
WESTINGHOUSE	0111, 2281, 3191, 3201
WHITE WESTINGHOUSE	0601, 0931, 1081, 1501, 1561
YAMAHA	0001, 0251, 2701, 2711, 2901
ZENITH	0001, 0061, 0131, 2321, 2731, 0691, 0931, 0991,

TV Code List

ZENITH	1191, 1251, 1631, 1661, 1771, 2051, 2171, 2291, 1011, 1081, 0371, 2901
--------	--

STB Code List

100MG	1283
ACCESS HD	1273
ADB	1243
AMINO	1223, 1233
AMPLICA	0103
BELL EXPRESSVU	0073, 0173, 0343
CHANNEL MASTER	0283, 0393, 0483
CHAPPARAL	0573, 0653
CHEYENNE	0653
DIGITAL STREAM	1203
DIRECTV	0983
DISH NETWORK	0073, 0173, 0343, 0403, 0493, 0603, 0783, 1003, 1013, 1023, 1033, 1043, 1053, 1063, 1303, 1313
DISHPRO	0073, 0403, 0493, 0603
DRAKE	0023, 0293, 0733
DX ANTENNA	0383, 0753
ECHOSPHERE	0173
ECHOSTAR	0073, 0173, 0343, 0403, 0493, 0603, 0783
ENTONE	1253
EXPRESSVU	0073, 0173, 0343
FORTEC STAR	0083, 0183, 0263, 0373, 0463, 0473
FUJITSU	0673, 0763
GE	0643, 0723, 0793, 0873, 1083
GEMINI	0123
GENERAL INSTRUMENT (GI)	0013, 0093, 0193, 0453, 0633, 0833, 0893, 0953, 0963
GLOBECAST	0003
HITACHI	0303, 0443, 0623
HNS	1153
HUGHES NETWORK	0303, 0443, 0563, 0703, 1153
INSIGNIA	0253
JVC	0173, 0783
KENWOOD	0413
LG	1153
LUXOR	0503
MACOM	0613
MAGNAVOX	0203, 0533, 0783, Magnavox Models 100MG9
MITSUBISHI	0303, 0443, 0623, 1153
MOTOROLA	0453
NORSTAT	0683
PACE	0053, 0133
PANASONIC	0213, 0223
PANSAT	0033, 0883
PHILCO	1283
PHILIPS	0203, 0303, 0443, 0533, 0623, 0703, 0783, 1153

STB Code List

PHILIPS-MAGNAVOX	0533, 0783
PRIMESTAR	0633, 1263
PROSAT	0813
PROSCAN	0643, 0723, 0873, 1083
RCA	0363, 0543, 0643, 0723, 0793, 0873, 1083
REALISTIC	0273, 0843
SAMSUNG	0233, 0853, 1113, 1123, 1143, 1213
SIERRA III III	0653
SKY NETWORK	0053, 0133
SONY	0113, 0553, 0773
STAR SIGHT	0863
STAR TRAK	0423
STARCHOICE	0633
STS	0383, 0583, 0663
SUPER GUIDE	0513
TELUS	1293
TIVAX	1273
TOSHIBA	0063, 0143, 0303, 0443, 0623, 0713, 1133, 1153
ULTIMATE TV	0553, 0873
UNIDEN	0693, 0823, 0863
VIDEO CIPHER II	0023
WEB TV	0113, 0783
ZENITH	0023, 0123, 0153, 0253, 0293, 0313, 0733, 1173
ZTE	1323

Cable Code List

ABC	0004, 0074, 0134, 0464, 0594
ADELPHIA	0664, 0714, 0724
ALLEGRO	0054, 0114
AMERICAST	0254, 0894
ANTRONIX	0264, 0334
ARCHER	0264, 0334, 0474
ARTEC	0854
AT&T	0674, 0724
BELL SOUTH	0254
BRIGHT HOUSE	0714
CABLETENNA	0264
CABLEVIEW	0264
CABLEVISION	0654, 0714, 0724
CENTURY	0474
CHANNEL MASTER	0834
CHARTER	0894
CHARTER	0664, 0684, 0714, 0724
CHARTER COMMUNICATIONS	0874
CHARTER DIGITAL	0864
CISCO	1014
CITIZEN	0474
COGECO	0724
COMCAST	0684, 0714, 0724, 1014
COMTRONICS	0014, 0084
CONTEC	0144
COSHIP	0844
COX	0914, 0934, 0944
COX DIGITAL CABLE	0714, 0724

Cable Code List

DIGITAL MUSIC EXPRESS	0044
EASTERN	0214
EVERQUEST	0014
GARRARD	0474
GC ELECTRONICS	0334
GE	0384, 0794
GEMINI	0204, 0344
GENERAL INSTRUMENT (GI)	0004, 0044, 0074, 0464, 0594, 0634, 0724
GOODMIND	0794
HAMLIN	0464
HITACHI	0594
ILLICO	0714
INSIGHT	0884, 0904
JASCO	0474
JERROLD	0004, 0074, 0194, 0324, 0464, 0594
LASONIC	0804
MAGNAVOX	0094
MEDIACOM	0914
MEMOREX	0624
MICROGEM	0814
MOTOROLA	0004, 0074, 0194, 0464, 0594, 0634, 0674, 0684, 0724
MOVIE TIME	0224
NSC	0224
OAK	0144, 0354
PACE	0714, 1014
PANASONIC	0304, 0394
PARAGON	0624
PHILIPS	0084, 0094, 0344, 0424, 0474, 0554

PHILIPS-MAGNAVOX	0064, 0104
PIONEER	0024, 0274, 0614, 0714
PULSAR	0624
RADIO SHACK	0064, 0104, 0114
RCA	0244, 0394, 0474
REALISTIC	0334
REGENCY	0214
REMBRANDT	0594
ROGERS	0714, 0924
RUNCO	0624
SAMSUNG	0014, 0024, 0714
SCIENTIFIC ATLANTA	0714
SCIENTIFIC ATLANTA/CISCO	0944, 0954, 0964, 0974, 0984, 0994
SCIENTIFIC ATLANTA	0124, 0134, 0164, 0234, 0724, 1004
SHAW	0014
SIGNAL	0014
SIGNATURE	0594
SKARDIN	0824
SL MARX	0014
SPRUCER	0394
STANDARD	0364
STAR SIGHT	0244
STAR TRAK	0184
STARCOM	0464
STARGATE	0014
TANDY	0434
TELEVIEW	0014

Cable Code List

TIME WARNER	0714, 0724
TIVO	0704, 0754, 0764, 0774
TOCOM	0004, 0504, 0634
TOSHIBA	0624
TV86	0224
UNIKA	0264, 0334, 0474
UNITED CABLE	0464
UNIVERSAL	0054, 0264, 0334, 0474, 0564
VERIZON	0684, 0724, 0784
VIDEO TECH	0454
VIDEOTRON	0714
VIEWWAY	0034
VIEWSTAR	0084, 0094, 0224, 0434
VOOM	1024
ZENITH	0114, 0474, 0524, 0584, 0624, 0644
ZENITH NETWORK	0254
ZENTECH	0824