



EU Code List

TV Code List	
ACCENT	0081,1181,1361,1701
ACUPHASE	1361
ACER	1321
ACOUSTIC SOLUTIONS	2121
	6791,6801
ACTION	0021,0081,0911,1111
	1801
ACURA	0081,1181
ADCOM	1291
ADLER	4101,8191
ADMIRAL	0021,0071,0081,0371
	1021,1721,1811,2191,2651
ADVENT	6951
ADVENTURA	0141
ADYSON	0021,0951,1111,1851
	1861,2221
AEA	0141,1181,1361
AEG	0141,1661,1731
AGASHI	1811,1851,1861
AGATH	1761,6961
AGB	0951
AGEF	1021
AIKO	0151,1331,1361,1701,1811
	1861
AIM	1181,1361,1731,1771,1821
AIRIS	4381,6971,7241,7251,7721
AIWA	3391
AKAI	3211,2071,6741,0041,0321
	0441,0461,0551,0951,1061
	1081,1091,1111,1181,1331
	1651,1701,1731,1761,1771
	1811,1861,1871,4371,6931
AKASHI	1701
AKIBA	1081,1181,1361
AKITO	1181,1361
AKURA	0021,0041,0081,1081
	1181,1361,1701,1811,4381
ALARON	1861
ALBA	0041,0071,0411,0661
	0951,1061,1081,1091,1181
	1701,1851,1871,2091,2541
ALBIRAL	0671
ALDEN	7261
ALFA	0021
ALIEN	1181
ALLOGRAN	0811,0951,1151
	1861
ALLSTAR	0021,1181,1361
ALLVIEW	7141
ALPHA	4101,6541,7271
ALPHA DIGITAL	7731,7741
ALPHATRONICS	7281
ALTEK	6981
ALTUS	4171
AMBASSADOR	0141,2261
AMERICAN HIGH	1801
AMITECH	6991
AMPLIVISION	0411,0951,1861
AMSTRAD	0081,0291,0461,0741
	1101,1181,1361,1701,1811
ANAM NATIONAL	1181,1361
ANAM	1701,1711
ANDERSSON	1661
ANGA	0141,2261
ANGLO	0081,1701,1811
ANITECH	0351,1081,1111,1201
	1361,1701,1811,2221
ANSONIC	0071,0081,0411,1181
	1201,1231,1321,1361,1701
ANTARION	6401
AOC	2001,0021,1111,7921
AR SYSTEM	0711,1181,1361
	2241
ARC EN CIEL	0841,0851,0911
	1071,1211,1241,1271
ARCAM	0951,1241,1851,1861
ARCELIK	4171
ARCON	1661
ARCTIC	4171
ARDEM	0041,1181,1361
ARENA	1871
ARIELLI	4101,4111
ARISTONA	0021,1141,1181,1321
	1361
ARSTIL	4171
ART TECH	0021
ARTHUR-MARTIN	0071,0241
ASA	0071,0341,0501,0511,1021
	1441,2181,2191
ASANO	0981,5731
ASBERG	0021,0351,0591,1181
	1201,1361
ASORA	0081,1701
ASTON	2011
ASTRA	0081,1181,1361
ASUKA	0951,1081,1811,1851
	1861
ATASHI	2601
ATD	1821
ATEC	7001
ATLANTIC	0021,0811,1181,1361
	1511,1851
ATORI	0081,1701

TV Code List	
ATORI	0081
AUCHAN	0071,0241
AUDIOSONIC	0041,0411,0951
	1081,1211,1231,1361,1591
	1651,1701,1811,1861
AUDIOTON	0081,0411,0951,1811
	1861
AUDIOVOX	0021
AUDIOWORLD	1821
AUMARK	1801
AUTOVOX	0811,0951,0991,1201
	1151,1181,1351,1861,2191
AVOL	1791
AVTEX	6771
AWA	1131,1171,1701,1731,1811
	1861,2441
AXEN	7291
AXION	7011
AXXENT	1701
AXXON	0041
BAIRD	0821,1211,1731,1771
	1861
BANG & OLUFSEN	0801,1011
	1021,2191,2351
BARCO	0071
BASIC LINE	0071,1081,1181
	1231,1701,1861
BASTIDE	0951,1861
BAUER	0461,1701,1811,1821
BAUR	0141,0151,0451,0461
	0501,1181,1281,1301,1331
	1351,1361,1701
BAZIN	1861
BBK	1541,1551,1561,1571,1991
BEAUMARK	1761
BEC	0021,0951
BECRESE	0021,0141,0501,0911
	1061,1111
BEKO	4171,0041,0411,0491
	0891,1591,1651,1731
BELL & HOWELL	0021
BELSON	1831
BELSTAR	1181
BENCHMARK-BEAUMARK	0021
	0081,1111,1801
BENQ	0361
BERON	0021,0591,1181,1361
BERLIN	4171
BEST	0411
BEST BUY	7301,7311,7321
BESTAR	0021,0071,0411,1181
	1231,1361
BESTAR-DAEWOO	1231
BEXA	2051,8101
BIGSTON	0081
BINATONE	1861
BLACK DIAMOND	1181,1361,1661
BLACK PANTHER	1201
BLACKSTRIPPE	0501,1061,1801
BLAUBERG	2601
BLAUPUNKT	2091,0251,0431
BOLVA	0441,0451,0461,0481,1081
	1091,1331,1751
BLOMBERG	4171
BLOOM	1181
BLU-SENS	1761
BLUE	0001
BLUE SKY	0021,0041,1081,1181
	1361,1591,1831,4381
BOGO	4111
BOLVA	8791
BONDSTEC	0991,1151,1701
	1861
BPL	1181,1361
BRANDT	0751,0761,0771,0841
	0851,0911,1071,1221,1241
	1251,1271,1291,2101,7901
BRAVO	1871
BRENDSTAR	0081
BRIGMTON	6431,7331
Brimax	7171
BRINKMANN	0021,0591,1181
	1361
BRIONVEGA	0021,0291,1021
	1181,1361,1661
BRIORRYEGA	0021,2191
BRITANNIA	1851,1861
BROCKWOOD	0141,1061,1111
	2261
BROKSONIC	0141,1061,1111
BROTHER	1811
BRUNS	1021,2191
BSR	0071,0151,1151
BTC	4061
BUSH	2001,0041,0151,0361
	0661,0951,1061,1081,1091
	1161,1181,1231,1361,1651
	1701,1771,1811,1821,1861
	1871,2231,4371,7981,2761
CAMERON	1451,1461,1481
CAMPLE	0141,1061,1111,2261
CANCA	8031

TV Code List	
CANDLE	1111
CAPEHART	0021,1061,1111
CAPSONIC	1811
CARAD	1181,1361
CARENA	1181,1361
CARREFOUR	0021,1061,1181
	1361
CARVER	0021,1751
CASCADE	1181,1361,1701
CASIO	0071,1181,1351,1361
CATHAY	0021,1181,1361
CCE	1181,1361,1861
CCI	0471
CELCUS	1871
CELLO	2531,2551,2601,3471
	3711
DIK	1181,1361
DIKOM	7031
DION	8591
DISNEY	7041
DIXI	0021,0081,1021,1181,1361
	1701,1861
CGE	0071,0081,0211,0351,0411
	0591,0991,1001,1241
CGM	0081,1081
CHANGHONG	0001,1991,6441
	6451,6461,6481,6501,6931
	7181,1391,6471,6491
CHIQ	0001,6511,7341
CIE	0081,0461,1231
CIHAN	0021
CIMLINE	0081,1091,1701
CINEX	0021
CIRCUIT CITY	0141,1061,1111
	2261
CITIZEN	0021,1111,1801
CITY	0081,1701
CLAIRTONE	1871
CLARIVOX	0621,0971,0991,1181
	1201,1361
CLATRONIC	0041,0071,0351
	0411,0951,0991,1001,1081
	1201,1361,1701,1731,1811
CLAYTON	1651,4221,1871
CMS	1851
CMS HIGHTEC	1861
CMX	3431,6741
COLORYME	0021,1801
COLOSSUS	7351
COMPUTRON	0081
CONCORDE	0081,1701
CONDOR	0071,0411,0991,1201
	1361,1701,1811,1851
CONIA	2951
CONIC	0021,1061,1111
CONRAC	0651
CONRAD	1181,1361
CONTEC	1061,1081,1171,1361
	1701,1811,1851
CONTEX	4111
CONTINENTAL EDISON	0111
	0751,0761,0841,0851,0911
	1071,1241,1271
COOCAA	3431
CORONADO	1111
COSMEL	0081,1181,1361,1701
CRAIG	0021,2481
CROSLLEY	0221,0351,0991,1001
	1021,1061,2191
CROSSWOOD	1181
CROWN	0041,0071,0351,0411
	1111,1181,1591,1701,1731
	1741,1771,8271
CRYSTAL	0021
CS ELECTRONICS	1851
CTC	0991
CTC CLATRONIC	0591
CURTIS MATHES	0021,1061,1111
	1721,1801,6261
CYBERTRON	0951
DAENYX	6931
DAEWOO	0041,0091,0721,0951
	1111,1231,1361,1701,1821
	1861,8381
DAICHI	0081
DAINICHI	1081,1851
DANSAL	1061,1111,1181,1361
	1701,1771,1811,1851,1861
DANTAX	0041,0411,1591,1371
DATSURA	1771
DAWA	0021,1181,1361,1701
DAYTEK	1811,1821
DAYTRON	0081,0501,1111,1181
	1231,1361,1701
DCE	1181
DE GRAAF	0071,0321,1771
DEC	4371
DECCA	0021,0601,0651,0951
	1041,1171,1181,1361,1861
DEITRON	1181,1231,1361
DELTON	1181
DENKO	1811

TV Code List	
DENVER	0031,0081,1181,1361
	1731,2881,4381,7621,7631
	7751
DESMET	0021,0081,1021,1181
	1361,1701
DGM	2101
DIAMANT	1181,1361
DIAMOND	0081,1701,1811,1821
DIGIHOME	1181,1871
DIGILINE	1181,1361
DIGILOGIC	1871,8721
DIGIMATE	7021
DIGIQUEST	1871,4111
DIGITOR	0151,1181,1361
DIK	1181,1361
DIKOM	7031
DION	8591
DISNEY	7041
DIXI	0021,0081,1021,1181,1361
	1701,1861
FINLANDIA	0071,0151,0321,0751
	0771,0821,1771
FINLUX	0041,0511,0571,0951
	1201,1441,1591,1861,1871
	6581,7051
FIRSTLINE	0041,0151,0951,0991
	1151,1181,1201,1231,1341
	1651,1701,1771,1831,1861
FISHER	0061,0151,0411,0951
	1021,1061,1441,1771,1861
	2191
FLAVEL	1181,1361
FLINT	0021,1181,1361,1811
FNR	1201
FORMENTI	0021,0071,0251,0951
	1021,1181,1361,1851,2191
FORTRESS	1021,1051,1061
	1111,1721,2191
FOX	4101,4111,4121,4231,4241
	4251,4261,4127,8201
FRABA	0411,1181,1361
FRIAC	0411,1181,1201,1361
	1701
DYONATRON	1181,1321,1361
DYON	2601
E-MAX	1731,2101
EATON	1801
ECCO	1821
EGG	1991,2101,7361,7371,7761
ECR	1061
EDISON	1211,1871
EDUK	1871
ELBE	0151,0411,0441,0971
	1311,1331,1341,1361,1861
	1871
ELBIT	0021
ELCIT	0071,0991,1021,1201
	2191
ELECS	0021
ELECTRATUNE	1111
ELECTRIQ	1871,3211
ELECTRO	0141
ELECTRO TECH	0081
ELECTROHOME	0141,1061,1111
	2261
ELECTRONICS	0991,1081
ELECTRONIKA	0021
ELEKTA	0081,1181,1361,1701
	1811
ELEKTRA	4111
ELEKTRABREGENZ	4171
ELEMENT	2621,3591,3381,4441
ELFUNK	1871
ELG	1181,1361
ELIN	0321,0501,1361,1441,1701
	1851
ELIT	2601
ELITE	0021,1061,1081,1111
	1181,1361,1801
ELKOS	1871,7381
ELMAN	0071,0671,0871,0891
	1201
ELTA	0071,0081,1701,1811
	1851
EMERSON	0041,0141,0151,0411
	1021,1061,1111,1361
E-MOTION	2091,4381
ENERGY SISTEM	1371,1381
ENIE	6511
EON	1061,1801
EPC	0651
ERISSON	3441,4181
ERRES	0021,1141,1181,1321
	1361
ESC	1181,1361,1861
ESTAR	4111
ESTELE	0081,1081
ETRON	0071,0081,0151,1181
	1361,1691,1701
EUROFEL	1811,1861
EUROLINE	1871
EUROMAN	0021,0411,0951,1181
	1361,1811,1851,1861
EUROPA	1181,1361

TV Code List	
EUROPHON	0071,0671,0961
	0991,1201,1361,1861
EUROSKY	1181
EXCEL	1181,1361
EXPERT	0071,0241,0581,0811
	1511
EXQUISIT	1181,1361
EYE TV	1941
F&U	2101,3441,4111
FAIRTEC	1831
FAMILY LIFE	1181,1361
FAVORIT	

TV Code List

REX	0381,0391,0811,0991,1001
	1511,1811
RFT	0381,0391,0401,0411,1021
	1181,1361,1811,2191
RHAPSODY	0951,1851
RICE CLUB	1801
RICOH	1181,1361
RINEX	1811,1821
R-LINE	0071
RMB	1111
RM-U301	1281
ROADSTAR	0041,0081,1081
	1181,1361,1701,1811,1961
	4371
ROBOTRON	1021
RODEX	1181,1361
ROKU TV	3381
ROSITA	0081
ROSNER	0951
ROWA	0031,0081,1701,1811
	1821,1851,1861
ROYAL	0081,1731
ROYAL LUX	0411,1221
RUBIN	0021,0071,1501
RUKOPIR	1181,1361
RUNCO	1801
SABA	0321,0761,0841,0851
	0961,1021,1181,1241,1251
	1271,1871,2091,2191,6931
SACCS	1341
SADKO	0071
SAGEM	1281,1791,2331
SAISHO	0021,0071,0461,0951
	1091,1171,1701,1811,1861
SAIVOD	1181,1361,1661
SAKAI	0071
SAKIO	0081
SALORA	0321,0371,0551,0561
	0571,0781,1181,1771,1871
	4111,8321
SALSA	1221
SAMBERS	0331,0351,0371,1061
	0951,0961,1201
SAMPO	1111
SAMSUNG	3831,3901
SAMSUX	1111
SAMUS	4971
SANDRA	1851,1861
SANELA	1341
SANG	4111,7491,7501,7511
SANKY	1111
SANSUI	0081,1111,1361,1801
	6931
SANTON	1701
SANY	0751
SANYO	4011,0381,0391,0411
	0481,0651,1061,1171,1361
	1441,1701,1751,1861,1871
	6811,3381
SASO	0911
SAVE	1181,1361
SBR	0021,1141,1181,1191,1321
	1361
SCEPTRE	2491
SCHAUB LORENZ	0041,0321
	1231,1731,1831,1871,2101
	2831
SCHNEIDER	0041,0051,0081
	0151,0391,0821,0971,0991
	1081,1151,1181,1321,1511
	1861,3211,4111,4351,4451
	1871
SCHONTECH	1871
SCOTLAND	0071
SCOTT	0141,1061,1111,1761
	1971,2261
SEDEA	2991
SEEVIEW	7521
SEG	0041,0351,0951,0991,1061
	1111,1181,1201,1701,1811
	1861,2321
SEI	0071,1021,1181,1201,1281
	1301,1351,1361
SEIKI	2621
SEI-SINUDYNE	0141,0291,0461
	1021,1091,1151,1201,1281
	1301,1361,2191
SEIZO	2441,2621
SELECLINE	1871,7351
SELECO	0381,0771,0791,0811
	0861,1181,1511,1811
SEMUA	1111
SENCOR	2541,6591
SENCORA	0081,1701
SENTRA	0071,0151,1081,1351
	1391,1701
SERINO	1721,1851
SÉURA	6571
SHARP	3421,3861,8741,0361
	1061,1871,2091,3241,4411
	6561,6751,6811,2751,3381

TV Code List

SHARP AQUOS	6751
SHINTOM	0141
SHINTOSHI	1181,1361
SHIVAKI	0021,1181,1231,1361
	1761,2251
SHORAI	1151
SHOW	0081,1701,1811,1821
SIAREM	0071,0221,0671,0951
	0961,1021,1201,2191
SICATEL	0411,0581
SIEMENS	0151,0251,0441,0451
	0461,0471,1051,1111,1181
	1331,1361
SIERA	0021,0031,0411,1141
	1181,1321,1361
SIGMAX	1801
SIGNATURE	0141
SILVA	0081,0151,1181,1361
SILVA SCHNEIDER	2951
SILVER	0071,0151,1061,1081
	1181,1361,1591
SILVERCREST	1181,1871
SIMPLY	2601
SINGER	0281,0581,0671,0991
	1001,1021,1201,1221,1361
SINODA	1701,2191
SINODYNE	0021
SINOTEC	1731,1821
SINUDYNE	0151,1021,1201,1281
	1301,1731
SKY	1181,1361,1761
SKY GLASS	6871,8331
SKYMASTER	7671,7681,7691
SKYTECH	1871,7531
SKYWORTH	3431,1401
SMARAGD	0111
SMART	2641,7701,7711
SMART TECH	4111
SNYDER	0021
SOGO	2101,7351
SOKOL	0071,1511
SOLAVOX	0071,0151,0321,1181
	1361
SONIKO	1181,1361
SONIQ	2071,2121,2131,2141
	2151,2161
SONITRON	0411,0501,1771,1861
SONNECLAIR	1181,1361
SONOKO	0021,0081,0951,1181
	1361,1701,1811,1861,4111
SONOLOR	0321,0581,1281,1301
	1771
SONTEC	0021,0411,1181,1361
SONY	6391,3611,0141,3391
	8681
SOUND & VISION	1081,1181,1201
	1231,1361
SOUNDESIGN	0141,1061,1111
	1761,1801,2261
SOUNDMASTER	0081
SOUNDWAVE	1181,1361,1591
SOYO	4381
SPECTRA	1231,1071
SPECTRICIAN	0021,1111
SSANGYONG	1701
STAKSONIC	1701
STANDARD	0081,0951,1081
	1181,1231,1361,1701,1861
	4381
STAR	0991
STARLIGHT	2521,7541
STARLITE	0071,0081,1181,1361
	1701,1811
STARLUX	0081
STELLA	0771,3391,7551,7561
	7571
STERN	0071,0231,0291,0381
	0391,0811,1511,1811
STRATO	1181,1361,1701,1811
STREAM SYSTEM	6851
STRONG	1661,2581,2741,3431
	3441
STYLANDIA	1861
SUNGDOO	4981
SUNIC LINE	1181,1361
SUNKAI	1081,1091,1151,1181
	1361
SUNNY	0001,4451
SUNRISE	1581
SUNSTAR	0081,1181,1361,1701
	1811
SUNWOOD	0021,0081,1181,1361
	1701
SUPERIOR	7091
SUPERLA	1851,1861
SUPERSONIC	1701,1771,1811
	1821
SUPERTECH	0081,0151,1181
	1361,1701,1851

TV Code List

SUPERVISION	1811,1821
SUPRA	0081,1231,1701,1761
	2411,2601,2781,6931,7801
	7811,1391
SUPREMACY	1061,1111
SUPREME	0141
SURE	0991
SUSUMU	0751,1221
SUTRON	0081,1701
SVA	1771,1811,1821
SVAN	1871
SWISSTEC	2091
SYC LINE	0081
SYDNEY	0951,1851,1861
SYLVANIA	1051
SYMPHONIC	0141,1061,1111
SYSLINE	1181,1361
SYTONG	1851
TANDBERG	0071,0151,0291
	0421,0911,1211
TANDY	0071,0951,0991,1081
	1721,1861
TASHIKO	0071,0951,1061,1191
	1751,1851,1861
TATUNG	3171,3181,0951,1171
	1361,1831,1861
TCL	3441,4131,2721,4211,4361
	8781,1481,3381
TCM	0041,1651
TD	1871
TD SYSTEM	4111
TD SYSTEMS	4111,7581,8161
TEAC	0041,1181,1351,1361
	1701,1751,1761,1811,1821
	1861
TEAK	0081
TEC	0151,0691,0951,0991,1221
	1231,1251,1361,1511,1701
	1861
TECHLINE	1181,1361,1661,1871
TECHNICAL	1181
TECHNICS	0021,0131,1711
TECHNIKA	2091,3401,0651,1871
	1981,2541,2951,6811
TECHNILAND	0021
TECHNISAT	0071,0651,0731
	1181,1361,8471
TECHNISSON	0041
TECHNOL	0081
TECHNOL ACE	1811,1821,1851
TECHNOSONIC	4371
TECHWOOD	0141,1181,1651
	1661,1801,1871,8271
TECNIMAGEN	0041
TECNISON	0081,1181
TEDELEX	0031,0081,1181,1361
	1701,1731,1771,1821,1861
	4381
TEIRON	1701
TEK	1701,1821
TEKNANT	0021,0081
TEKNIKA	0141,1111,1801
TEKON	0081,1801
TELE SYSTEM	1871,7091,7591
TELEAVIA	0841,0851,0931,1071
	1211,1241,1271
TELECOM	0071,1181,1361,1861
TELEFAC	0081
TELEFUNKEN	6741,1871,4191
	4201,0031,0141,0881,1221
	1251,1821,4371
TELEFUSION	1181,1361,1871
TELEGAZI	0071,1181,1361,1811
TELEKA	1871
TELEMEISTER	1181,1361
TELEOPTA	0081
TELERENT	0021
TELESONIC	1181,1361
TELESTAR	0081,1181,1361
	1701
TELETECH	0081,0991,1181
	1361,1701,2321,1871
TELETON	0071,0811,0951,1061
	1351,1511,1861
TELEVIDEON	0071,1851
TELEVIEW	1181,1361
TELEVISO	0581
TELEXA	1201
TELIVA	0911
TEMPEST	0081,1181,1361,1701
	1811
TENNESSEE	1181,1361
TENSAI	0071,0501,0641,0951
	1081,1151,1181,1231,1441
	1591,1701,1861
TENSON	1701
TESLA	0021,0041,1181,1281
	1361,1651,2231,2291,3431
	4221,4281,4291,4301,4311
	4321,4331,4341,4351,8271
TEVION	0021,0041,1181,1361

TV Code List

TEXET	0951,1231,1701,1851
	4111,4221,4281,4371,4381
	4391,4451,8191
VIVID	1651
VIVO	8561,8571,8581
VIZIO	1761,3841,8281
VORTEC	0021,1181,1361
VORTEX	4111,7451,7601
VOX	1871
VOXSON	0021,0071,1021,1181
	1361,1761,2191
VU	2101,7191
WALKER	1871,8271
WALKIE	1511
WALTHAM	0221,0321,0751,0931
	0951,1261,1361,1861,1871
WANSFA	2601
WATSON	0021,0071,0081,1081
	1181,1361,1701,1871
WATT RADIO	0071,0151,0221
	0591,0671,0951,1201,1351
	1851
WEGA	1021,1061,1181,1361
	2191
WEGAVOX	0021,0081,0591,0991
	1181,1361,1701
WELLINGTON	1871,7481
WELLTECH	0041
WELTBlick	0021,1181,1361
	1861
WESTINGHOUSE	3381
WESTINGHOUSE (ROKU TV)	3381
WESTON	1181,1361
WHARFEDALE	0021,1021,1181
	1361,1821
WHITE-WESTINGHOUSE	0951
WILSON	1361,1851
WINDSOR	1181,1871
WINSTON	0021,0081
WINTEL	0041
WINTERNITZ	0081
WORLD-TECH	1231
WORLDVIEW	0021,0081
XIAOMI	6941
XLOGIC	1821
XORO	1731,2061,2421,2501
	4401,4471,4481,4491,6521
	8091
XRYPTON	1181,1361
X-VIEW	1831
YAMAHA	1711
YAMISHI	1181,1361,1861
YOKAN	1181,1351,1361
YOKO	0021,0071,0081,0411
	0911,0951,0991,1001,1081
	1231,1811,1851
YORK	0021,0501
YORK	1081
ZANUSSI	0071,0811,1861
ZENITH	0021,0141
ZEPHIR	2441,7611,7901
ZUTEST	6821

TV Code List

VIVAX	1651,2121,2601,3441
	4111,4221,4281,4371,4381
	4391,4451,8191
VIVO	1651
VIVO	8561,8571,8581
VIZIO	1761,3841,8281
VORTEC	0021,1181,1361
VORTEX	4111,7451,7601
VOX	1871
VOXSON	0021,0071,1021,1181
	1361,1761,2191
VU	2101,7191
WALKER	1871,8271
WALKIE	1511
WALTHAM	0221,0321,0751,0931
	0951,1261,1361,1861,1871
WANSFA	2601
WATSON	0021,0071,0081,1081
	1181,1361,1701,1871
WATT RADIO	0071,0151,0221
	0591,0671,0951,1201,1351
	1851
WEGA	1021,1061,1181,1361
	2191
WEGAVOX	0021,0081,0591,0991
	1181,1361,1701
WELLINGTON	1871,7481
WELLTECH	0041
WELTBlick	0021,1181,1361
	1861
WESTINGHOUSE	3381
WESTINGHOUSE (ROKU TV)	3381
WESTON	1181,1361
WHARFEDALE	0021,1021,1181
	1361,1821
WHITE-WESTINGHOUSE	0951
WILSON	1361,1851
WINDSOR	1181,1871
WINSTON	0021,0081
WINTEL	0041
WINTERNITZ	0081
WORLD-TECH	1231
WORLDVIEW	0021,0081
XIAOMI	6941
XLOGIC	1821
XORO	1731,2061,2421,2501
	4401,4471,4481,4491,6521
	8091
XRYPTON	1181,1361
X-VIEW	1831
YAMAHA	1711
YAMISHI	1181,1361,1861
YOKAN	1181,1351,1361
YOKO	0021,0071,0081,0411
	0911,0951,0991,1001,1081
	1231,1811,1851
YORK	0021,0501
YORK	1081
ZANUSSI	0071,0811,1861
ZENITH	0021,